


2.4GHz Digital Wireless Video Door Phone User Manual

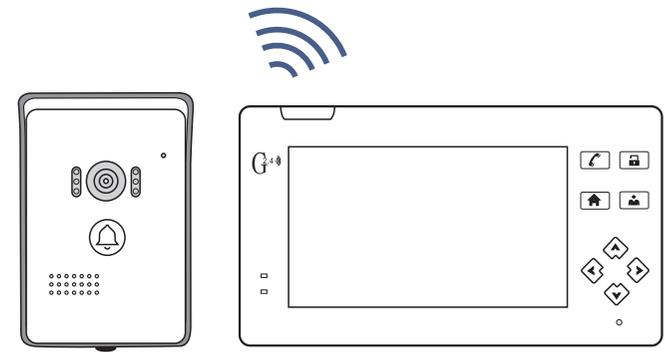

- ★ Thank you for purchasing our product.
- ★ Please carefully read this user manual before using the product and follow the manual to install and operate

Contents

Instruction	2
Features	2
Packing List	3
Outdoor camera	4
Indoor monitor	4
Installation instruction	5
E-lock installation	6
Operation	7
Specification	13
Working environment.....	13
Notices	13
Failure diagnosis.....	14

12.Failure diagnosis

Malfunction	Checking&Debug
The image is flashing or noisy	Make sure the battery electricity is enough (one electricity grid at least)
Fail to start the products	Make sure the battery switch is "ON" or connect the adapter to check all functions are working well.
Fail to charge	<ol style="list-style-type: none"> 1. Make sure the adapter and data cable in right way. 2. Make sure the power indicator in working mode. 3. Make sure the battery is ok for indoor & outdoor.
Outdoor camera/ indoor monitor can't hear each other	<ol style="list-style-type: none"> 1. Make sure in quite environment and keep away in relative distance. 2. Make sure the volume in right place.
Noisy	Keep indoor monitor away from outdoor camera in 5 meters or lower the volume.
Too dark of screen	Make sure the outdoor camera installation in back light environment or adjust the brightness of indoor screen.
Fail to unlock	<ol style="list-style-type: none"> 1. Make sure the outdoor camera is not far away from the lock, avoid metal barriers. 2. Make sure the wire connection is correct. 3. Make sure the product and lock is working well.
No signal for indoor monitor, wireless distance is too near	Keep the product far away from strong magnetic space.
Outdoor camera can't call indoor monitor	<ol style="list-style-type: none"> 1. Make sure the power indicator is on, if the battery electricity is not enough, will fail to call. 2. Make sure the battery electricity is enough, or the power adapter is connected. 3. Make sure the switch to code is correct. 4. Check the indoor monitor signal indicator(18) is flash or not.

G. Power-saving mode switching (outdoor unit)

Power-saving mode switching into non power-saving mode: under the power-saving model, keep pressing the bell button for 8s, then the outdoor unit will switch into non power-saving model (The effects can be seen after the Indoor unit called through by the outdoor unit), it is same method for non power-saving mode switch power-saving mode. The above method of operation is limited to the Li-battery power alone.

9. Specification

Outdoor camera

Power supply	Input: 100V-240V 50/60Hz Output :DC13V - 1.3A or BL-5J 1320mAh Li-battery	Camera	CMOS 300,000 pixels
Size	128 × 96 × 36 mm	Light source	5 LED lights
Charging time	3 hours	Standby	more than 90 days

USB Power	Input : 100V-240V 50/60Hz Output : DC 5V/1A	Screen	7" TFT 800×480
Size	236 × 132 × 18 mm	Battery	1320mAh Li-battery (optional)
Charging time	3 hours	Standby	depend on battery capacity, suggest to connect power adapter if standby longer time.

10. Working environment

- (1) Working temperature: 15°C— +55°C (2) Working humidity : ≤85%

11. Notices

- (1) Please don't cover anything on the Microphone or speaker when it is in working mode.
- (2) Please always use the specified power adapter, or that with the same model.
(same standard voltage and current)
- (3) Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards.
- (4) Please carefully read use manual before using the product and follow the manual to install and operate, any questions, please call our technical support office.
- (5) Please connect indoor monitor to power adapter when it is in non-movable mode.
- (6) Please connect indoor monitor & outdoor camera to power adapter when additional indoor monitor, to make sure the signal connection is correct.

1. Instruction

The product is applicable in office, house, apartment, hotel, building and so on.

The outdoor camera is easy to install and indoor monitor is portable. It can be hung on the wall, or be placed on the desk.


2. Features

- (1) 2.4GHz digital frequency hopping and encryption technology, Transmission distance up to 200 meters in free field, robust and anti-interference.
- (2) Clear night vision can capture image in low-illumination environment.
- (3) 7inch TFT color panel for indoor monitor.
- (4) Waterproof and moisture of outdoor camera.
- (5) Surveillance, unlock, hand-free call and talk.
- (6) 16 chord melodies and melody volume is adjustable.
- (7) Date and time shown in screen.
- (8) Indoor monitor with photo memory and video memory, could take photos or videos automatically, the date and time will show when browse the photos or videos. It could store up to 100 photos or support TF card, maximum 32G.
- (9) Contrast, brightness and talk volume is adjustable.
- (10) BL-5J battery of camera and monitor is replacement and rechargeable.
- (11) Wireless unlock supports power on and power off unlock.

3. Standard package accessories



(1) Outdoor camera

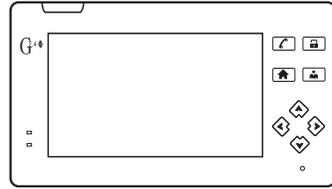

(2) Indoor monitor



(3) SD / TF card (built-in)



(Note: Battery can be optional if the indoor unit without battery from factory)




Brightness / contrast / volume control - select camera1 (1)



Brightness / contrast / volume control (2)

F. Monitor/Camera screen section

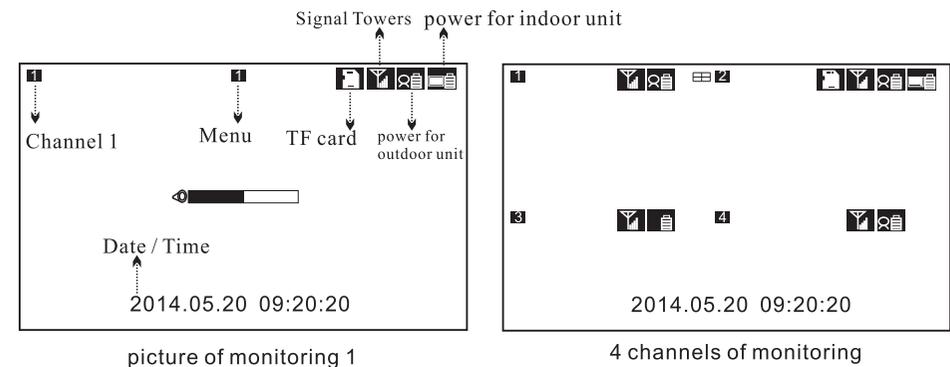

picture of monitoring 1


4 channels of monitoring

Adjust the talk volume

Under surveillance and intercom mode, press  (left button) firstly, then press  button to adjust the talk call volume



Under surveillance and intercom mode, press  button to take photos. Top left of the screen appears "PHOTO" flashes, photographed completed. Back to the main menu, press  button.

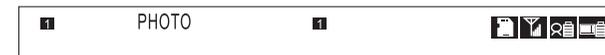

Under surveillance and intercom mode, press  button into the recording mode. Screen appears "Standby", while the bottom right of the screen appears red dot indicates in recording. If the lower right always show "Standby", means not enough memory. press  button to cancel. Back to the main menu, press  button.

D. Photo / Video section

(1) Photo / video browsing



Photo /Video

After entering the video interface, press the button to find the video playback time period; and press button into view.

The lower right corner with red icon when playback.



Photo / Video Interface



View photos/Delete photos


Select the image browsing page, press enter image browsing page, press button to up and down choosing, press button to enter photos folder, press button till appear .then press button delete the photos. press button to return.

E. brightness / contrast / volume settings section

(1) brightness / contrast / volume adjustment

In the main menu, select the brightness / contrast / volume adjust, Press the enter key into the camera channel selection interface (1). select the channel which need to be adjusted, and after press the button to confirm, enter channel (2), press button to select brightness/contrast/volume adjust, press button to switch brightness / contrast / volume, press button to confirm.


4.outdoor unit

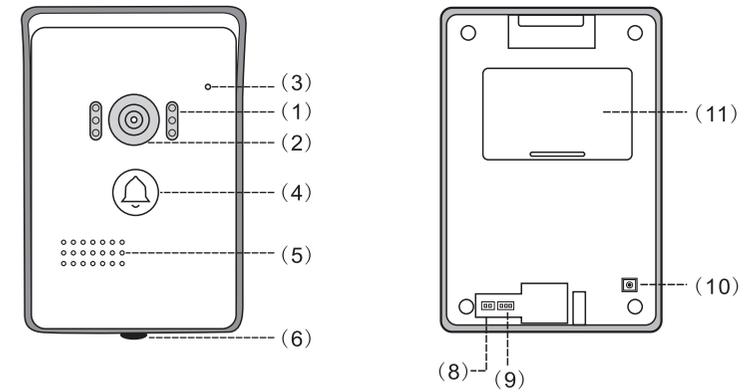

- (1)IR light (2)Camera (3)Microphone
- (4)Bell button/Power-saving switch (6)Speaker (7)Lock connector/screw
- (8)power DC13V/1.3A (9)E- lock /magnetic lock connection
- (10)Code switch (11)Battery Box

Mark: Press the (5) button for 8s can switch to power-saving (non power-saving) mode of the outdoor unit (without using adapter)

5.Indoor unit

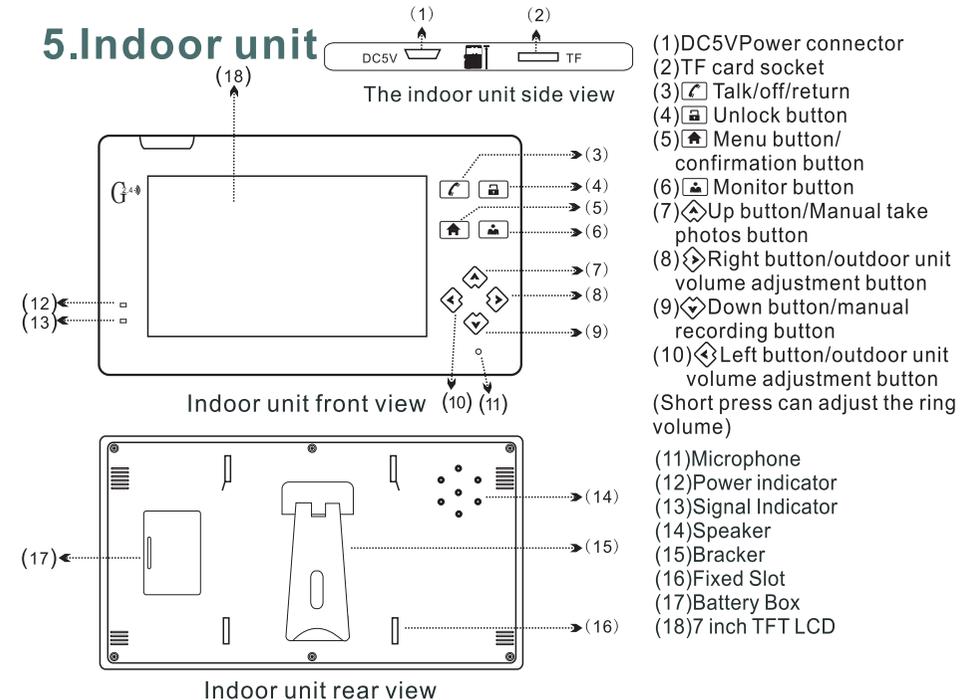


- (1)DC5V Power connector
- (2)TF card socket
- (3) Talk/off/return
- (4) Unlock button
- (5) Menu button/confirmation button
- (6) Monitor button
- (7) Up button/Manual take photos button
- (8) Right button/outdoor unit volume adjustment button
- (9) Down button/manual recording button
- (10) Left button/outdoor unit volume adjustment button (Short press can adjust the ring volume)
- (11)Microphone
- (12)Power indicator
- (13)Signal Indicator
- (14)Speaker
- (15)Bracker
- (16)Fixed Slot
- (17)Battery Box
- (18)7 inch TFT LCD


6. outdoor unit installation method

Outdoor unit should be installed avoid direct light shining or raining, and make sure less obstacle between outdoor unit and indoor unit, otherwise the signal will be attenuated. The place for indoor unit adjust according to the signal. proper installation height around 1.5m, if the cable need go cross the wall, the plug must be packaged with tape, avoid sediment into the plug inside and cause failure. (The signal light(18) of the outdoor unit will flash when outdoor unit and indoor unit detected signal, indoor unit signal full scale grid is the best match point)

1. Fix the rain cover and bracket with screws

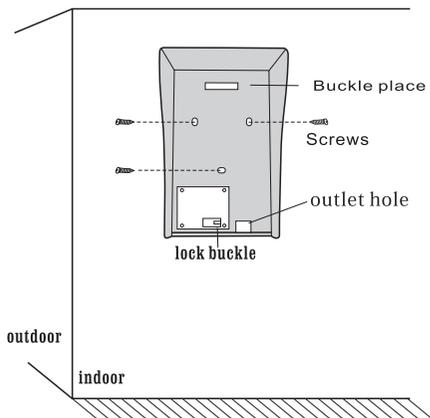

2. Make the wire through the rain cover and bracket, and connected to the terminal block on the outdoor unit, and put the unit back to the buckle place, final locked by theft lock.

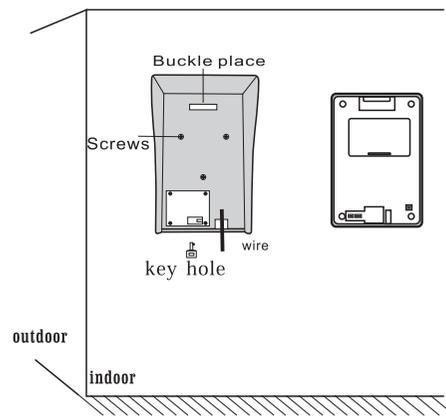


(9) Information/Code setting

Select the button as picture in Picture 7-1, and press the button to check the indoor unit information.

When need to code, please enter setting surface (As Picture 7-2), and keep pressing button for 5s, and enter the surface as Picture 7-3 to press the button to confirm; At this moment, it will show "Pairing...." while holding down the code button of outdoor unit, display pairing ok (success of the code), display pairing fail (failure of the code). Press button to return the setting interface, 7-4 Pictured clear the code, select "YES" and press button to clear all codes, "NO" will not.




picture 7-1

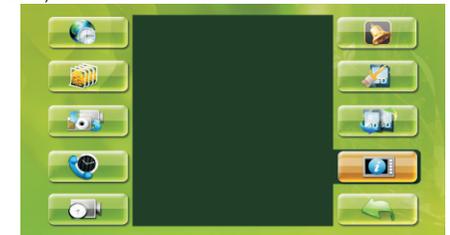

picture 7-2



picture 7-3

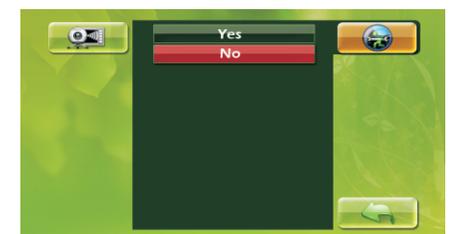

picture 7-4

Explanation: The machine is used in stealth mode for code, prevent accidental deletion, must code before used. (the indoor unit and outdoor unit have code when factory delivery): if add more outdoor unit, must set code.

C. Monitor section

(1) Monitor channel Setting



Monitoring channel selection



Monitoring channel has 1/2/3/4 / and four split screen. When only one outdoor unit, select to choose channel. press button to confirm. Can choose channel when you have more wireless outdoor unit. When required for monitoring a plurality of screens, can use four split screen while monitoring.

(5)Recording time setting

Select the  key surface, press  button to switch the length of recording time (5s/10s/30s/60s), press  key to confirm, press  button return to setting page,as picture 5.



Picture5

(6)Melody ringing setting

Select the  key surface, press  button to switch the built-in 16 ringings for calling , press  button to confirm , press  return to setting page as picture , 6-1.6-2.



Picture 6-1



Picture 6-2

(7)TF Coverage(Be careful operation)

Select format/TF card Coverage icon,press  to enter,and press  tochoose Yes/No,finalPress  to confirm.



Formatting




SD cover

7.Locks installation

A.E-lock,power on unlock method

1.Anode"+” on E-lock connects to “Lock 1” on outdoor unit

Negative electrode “-” on E-lock connects to “GND” on outdoor unit

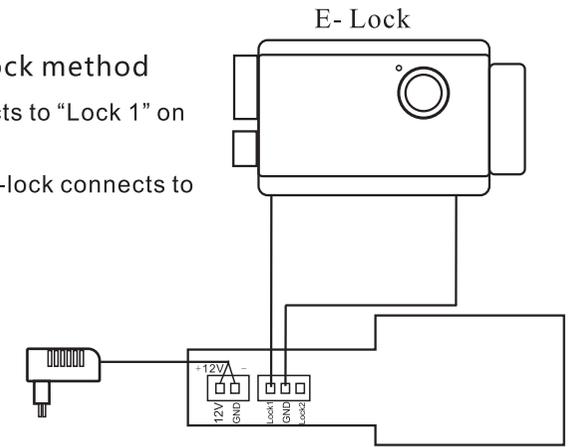


The back of outdoor unit

B.E-lock & magnetic lock,power off unlock method.

1.Anode ”+” on magnetic lock connects to “Lock 2” on outdoor unit.

Negative electrode “-” on magnetic lock connects to “GND” on outdoor unit, normally closed.as following:

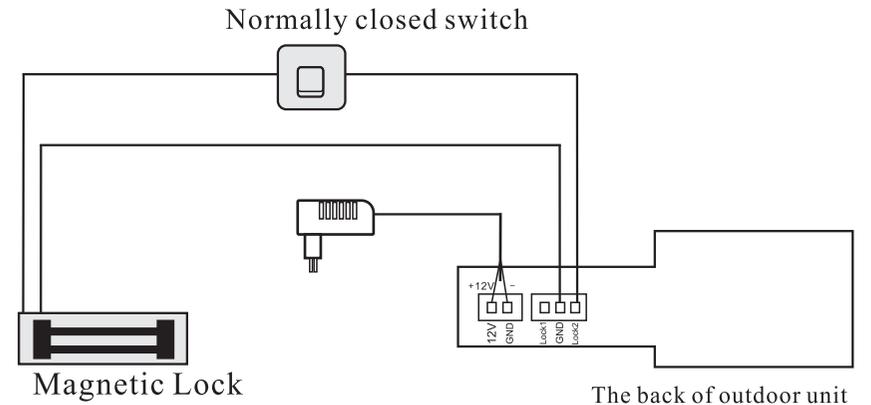

The back of outdoor unit

8. Indoor unit operation

Note :when the system is in working condition,if there is no barrier between indoor unit and outdoor unit,must keep 3-6m to avoid the "whistle" sound.


A. Main Menu



- (1) Channel selection
- (2) Photo / Video
- (3) Brightness / contrast / sound
- (4) Set up
- (5) Return

B. Setting

(1) Date and time

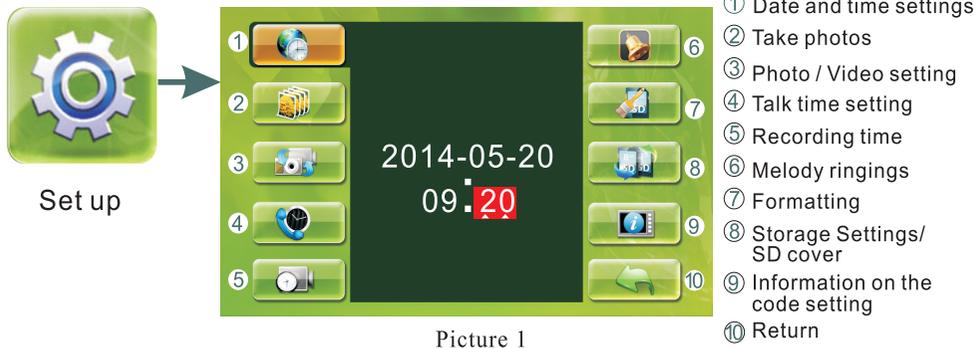

Picture 1

The indoor unit in the case of non-intercom, press button to enter the main menu, press button to interface,press button to enter the setting page as picture 1. Select ,press to select the date / time settings, press button to set Time / Date , press button to change year / month / day.

(2)Photo burst setting

Select the key surface, press to select Photos burst setting,press button to confirm ,press button to return the setting page, as picture 2.



Picture 2

(3)Photo / video setting

Select the key surface, press to switch photo/ video setting ,press button to confirm, press button to return to settings page, as picture 3.



Picture 3

(4)Talk time setting

Select the key surface, press to switch Talk Time(30s/60s/120s/180s), press button to confirm, press button to return to settings page, as picture 4



Picture 4